



MaxWT Installation Procedure

Step 1

Remove Quick Pin
Loosen Handle

Step 2

Place MaxWT sensor on rope
As Shown
Then re-insert Quick Pin

Step 3

Tighten the Handle until the Rope is
Pulled and just touches the
Calibration Plate
Rope will "Deflect"

Step 4

Ready for 2 Point Calibration

Note:

The unit when installed is usually
Under load from the block.
Use "block weight" as the low point

